











What to do if... What to do if...

	A tire punctures	P. 517/ 527	If you have a flat tire
	The hybrid system does not start	P. 88 P. 528 P. 534	Immobilizer system If the hybrid system will not start If the 12 volt battery is discharged
	The shift lever cannot be moved out	P. 529	If the shift lever cannot be shifted from "P"
	The engine coolant temperature gauge enters the red zone	P. 538	If your vehicle overheats
	Steam can be seen coming from under the hood		
	The key is lost	P. 530	If you lose your keys
	The battery runs out	P. 534	If the 12 volt battery is discharged
	The doors cannot be locked	P. 50	Doors
	The horn begins to sound	P. 90	Alarm
	The vehicle is stuck in mud or sand	P. 541	If the vehicle becomes stuck

 The warning light or indicator light comes on P. 491 If the warning light turns on



Warning lights

	Brake system warning light		Malfunction indicator lamp
or		or	
	P. 491		P. 492
	ABS warning light		Driver's seat belt reminder light
or			P. 493
	P. 492		Front passenger's seat belt reminder light
			P. 493
	ECB*/VSC warning light		Tire pressure warning light
	P. 492		P. 493
	Low fuel level warning light		Electric power steering warning light
	P. 493		P. 492
	SRS warning light		Pre-collision system warning light
	P. 492		P. 492
	Open door warning light		Master warning light
	P. 493		P. 494
	Charging system warning light		
	P. 491		

*: Electronically Controlled Brake System

 The warning message is displayed P. 500 If the warning message is displayed